


CORBY

Use & Care Manual Steam Iron

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference. Failure to follow them could cause injury and/or property damage.

**These instructions apply to the products shown below.
Styles may vary.**

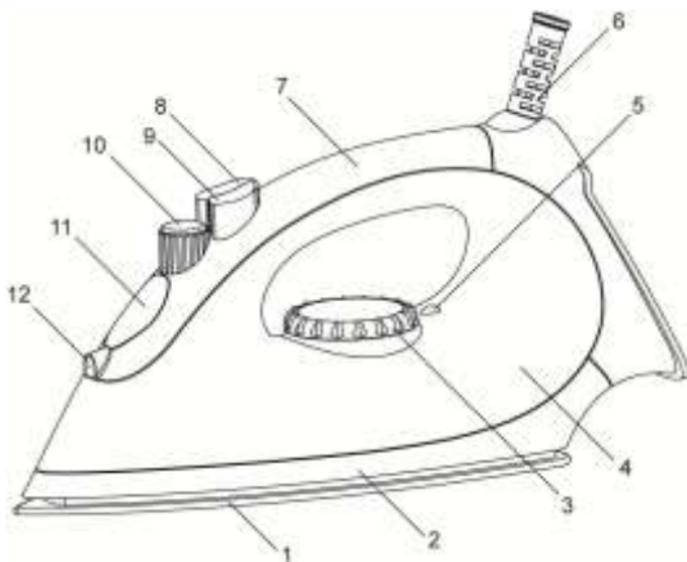

This appliance is not intended for use by persons including children with reduced physical, sensory, mental capabilities, or lack of experience/knowledge; unless supervision or instruction concerning the use of this appliance has been given by the person(s) responsible for their safety.

Customer telephone helpline: 08448 809301
Helpline email: customer.support@firedupgroup.co.uk
www.CorbyofWindsor.com

SPECIFICATIONS

Rated voltage	220-240V	Water volume	145ml
Rated frequency	50Hz	Weight	0.83KG
Rated power	1200W	Soleplate size	155 cm2
Temperature range	65-230°	Holding method	Standing
Extra strong steam method	Pressing	Accessory	One cup
Standard steam	Dropping	Size	250 x 108 x 115mm
Function	Burst of steam, standard steam, vertical burst of steam, spray dry of ironing .		

FEATURES & CONTROLS

- | | | |
|--------------------|-----------------|---------------------|
| 1. Soleplate | 5. Control lamp | 9. Steam jet button |
| 2. Skirt | 6. Wire tube | 10. Steam knob |
| 3. Temp regulator | 7. Upper-cover | 11. Water inlet |
| 4. Body/water tank | 8. Spray button | 12. Spray nozzle |

USAGE

Attention! Only iron garments with this appliance.

Ironing without steam

- Place the iron its stand
- Electrical connection - make sure that the voltage (see name plate) and the mains voltage match.
- Sort out the garments according to their ironing temperatures. Start with the lower temperatures using the temperature regulator (3):
 - Synthetics, silk (low temp)
 - Wool (med temp)
 - Cotton, linen (high temp)
- Insert the mains plug into a correctly installed earthed socket.
- The control lamp (5) lights up. As soon as it shuts off, the set temperature is reached (approx. 1-2mins). Now you can iron.
- When the iron is not in use always unplug the appliance from the mains.

Customer telephone helpline: 08448 809301
 Helpline email: customer.support@firedupgroup.co.uk
 www.**CorbyofWindsor**.com

Ironing with steam

1. Using the filling beaker (provided), fill the water tank (4) through the water inlet (11) with pure water - up to degree of hardness 2. Please use distilled water instead if the water is harder than previously stated.
2. Turn the steam knob (10) to "  ", in order to begin steam ironing.
"  " --- max position
- "  " --- off position

Steam jet function

1. Turn off the steam knob (10) first.
2. Turn the temp regulator (3) to max position.
3. After the indicator goes off, press the steam jet button (9).
4. At most, it can release steam 7 times continuously (approx. pressing the button once every second).

Spray function

In order to moisten an area, press the spray button (8).

Auto shut-off function

- The iron will automatically shut off if left standing still.
- In upright position it will auto shut-off after 8 mins.
- In horizontal position it will auto shut-off after 30 secs.

Note: always allow the iron to cool down completely before packing the appliance away.

CLEANING & STORAGE

- Always unplug the iron before cleaning.
- Clean the iron with a slightly damp cloth.
- Do not use any abrasive cleaning agents.
- To clean the iron and remove deposits of starch or water soluble, rub the soleplate (1) with a soft cloth soaked in vinegar and water.

GENERAL SAFETY

1. Read these instructions carefully before putting the appliance into operation and keep them somewhere safe.
2. The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not intended for heavy commercial use. Do not use it outdoors. Keep it away from sources of heat, direct sunlight, humidity (never submerge it in any liquid) and sharp edges. Do not use this appliance with wet hands. If the appliance is wet or in unsuitable conditions unplug it.
3. When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket. Do not use this product without full knowledge/experience of how it functions. If you should leave the area where the appliance is being used, always turn the product off.
4. Make sure that children cannot gain access to the appliance especially during use.
5. Check the appliance and the cable for damage regularly. Do not use the appliance if it is damaged.
6. Do not attempt to make repairs to the device. Always contact a qualified technician.
7. **Pay extra attention to the SPECIAL SAFETY instructions.**

SPECIAL SAFETY


1. **WARNING!** The ironing base becomes hot very quickly and takes a long time to cool down. Please do not touch it.
2. Some smoke may be emitted at first use, this is not a fault.
3. When the iron is not in use it should be placed in its stand. Ensure that the surface on which the stand is placed is stable.
4. Always unplug the iron when filling it with water. Never fill it with more than 1 beaker full.
5. Let the iron cool completely before packing it away.
6. The iron must not be left unattended while it is switched on.
7. Do not use this appliance if it has been dropped or has any signs of damage.

CONNECTION TO THE MAINS SUPPLY (for UK plug type only)

1. Check that the voltage marked on the product corresponds with your supply voltage.
2. This product is fitted with a 13A plug complying with BS1363. If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are coloured in accordance with the following code:

GREEN/YELLOW: EARTH
 BLUE: NEUTRAL
 BROWN: LIVE

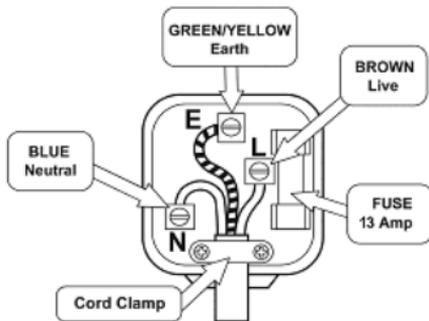

WARNING - THIS APPLIANCE MUST BE EARTHED

As the colours may not correspond with the markings identifying the terminals in your plug proceed as follows.

- The green and yellow wire must be connected to the terminal in the plug which is marked with the letter E or with the earth symbol  or coloured green and yellow.
- The blue wire must be connected to the terminal marked N or coloured black.
- The brown wire must be connected to the terminal marked L or coloured red.

Important - any cut off plug should be disposed of safely to prevent hazard. There is a danger of electric shock if a cut off plug is inserted into a socket outlet.

Customer telephone helpline: 08448 809301
 Helpline email: customer.support@firedupgroup.co.uk
www.CorbyofWindsor.com

CONFORMITY WITH DIRECTIVES

Conforms with relevant European Directives.



ENVIRONMENTAL PROTECTION

(WEEE)Waste Electrical and Electronic Equipment

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This appliance complies with the RoHS directive which restricts the use of certain hazardous substances in electrical and electronic equipment.

This Directive bans the placing on the EU market of new electrical and electronic equipment containing more than agreed levels of lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyl (PBB) and polybrominated diphenyl ether (PBDE) flame retardants.



Customer telephone helpline: 08448 809301
Helpline email: customer.support@firedupgroup.co.uk
www.CorbyofWindsor.com